


RELIABILITY AND RELEASE BOXES, (260)

This module is located in the passenger compartment, at the bottom left of the dashboard

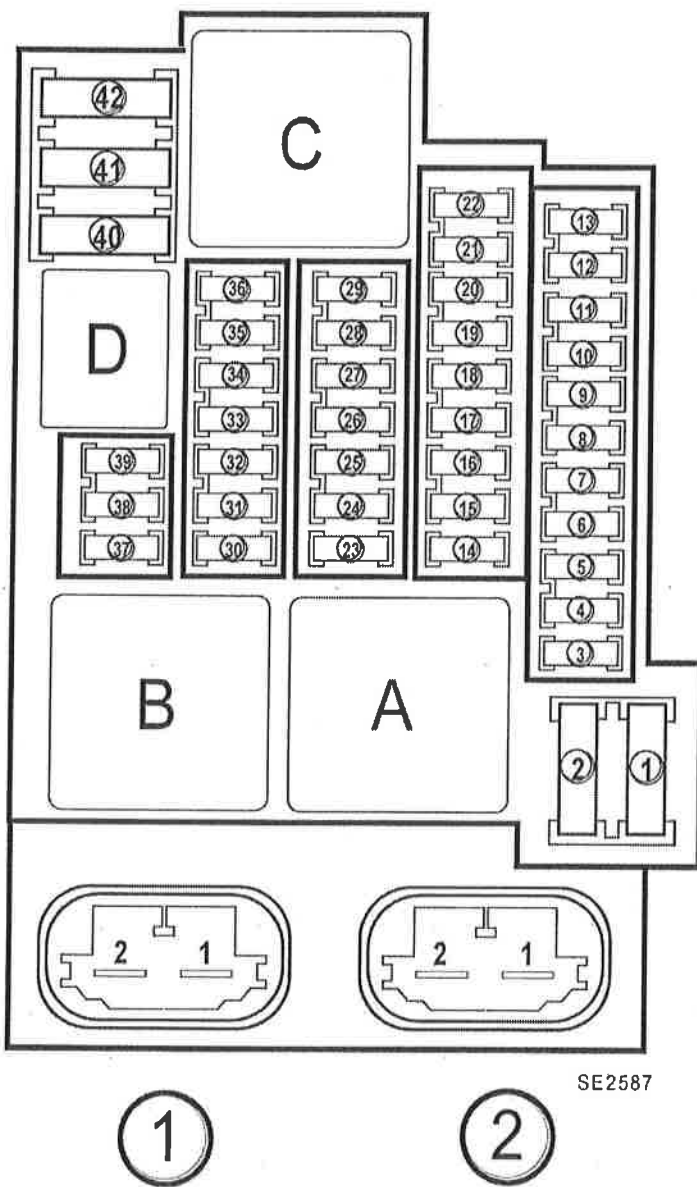

Fuses and relays

Security coverage (according to equipment level)

Nr.	Amps	Connection	Designation
F1	--	--	Not Used
F2	--	--	Not Used
F3	10A	BPE4	Maintenance: Operation Cl imaanlage Ride (1 225) - Temperature control Passenger compartment (1872) - Air conditioning compass (2f 30) - Control unit Heat pump (2295) - Bypass solenoid valve High pressure compressor (231 1) - Solenoid valve Heat pump (2319) - Control unit air conditioner (a19)
F4	10A	BPE2	Fuse: Magnetve ntional drive battery cooling (2345) solenoid valve 2 Drive battery charger (2349)
F5	--	--	Not Used
F6	5A	BPE5	Fuse: control relays 1,2 and 3 (1067-1068-1069) of the Additional heating
F7	7.5A	15RP	Fuse: Electric exterior mirrors Driver's and Passenger's side (23g - 240)
F8	--	--	Not Used
F9	--	--	Not Used
F10	--	--	No Used
F11	--	--	Not Used

Fuses and Relays

Nr.	Amp	Connection	Designation
F12	--	--	Not Used
F13	--	--	Not Used
F14	25A	BT10	Release: Relay control Electric windows (703) - Sicherung: Window lifter driver (203)
F15	5A	BT4	Release: Brake light switch (1 60) ABS and / or ESP control unit (10e4)
F16	10A	BT7	Safety device for electric vehicle warning light (21 38)
F17	15A	BT11	Radio (261)
F18	10A	BT3	Resolution: Rain and Brightness Sensor (1415) - Alarm Message Module Safety belt (1 601) Front interior light (21 3) - Luggage compartment light (165)
F19	5A	BT5	Regeneration brake (21 97)
F20	--	--	Not Used
F21	5A	BT2	Isolation: Switch unit electrical exterior mirrors (1 34) - control Electric rear window lock (136) - left and right Lehmlwide regulation motor (537-538) - Switch regulator Luminous flux regulation (1 390)

Fuses and Relays

Nr.	Amps	Connection	Designation
F22	--	--	Not Used
F23	30A	BP79	Power supply: Fuse fuse (F28-F29) (260) via Relay 2 Permanent current with timer disabled (1761)
F24	15A	BP25	Fuse: via the passenger compartment control unit (645): Tailgate lock (1 322) - Rear window wiper motor (211) - left rear fog light (175) at - left-hand steering version - Right rear fog lamp (17 4) at - Right - hand steering version
F25	--	--	Not Used
F26	15A	BP26	Recording: Video display (1 127) - Multimedia keyboard (1 657)
F27	20A	BP1H	Security: Radio (261)
F28	10A	BPT6	Fuse: steering column control (1519)
F29	15A	BPTB	Battery: Cigarette lighter (1 01) - Socket for accessory connection (506)
F30	15A	BP19	Parking: over the passenger compartment (645)   Right tail light (173) - right front light (227t - electrical Exterior mirrors Driver's side (239) - Right tail light (172) - (226) - El ectric exterior passenger side (24a)

Nr.	Amps	Connection	Designation
F31	10A	BP77	Fuse: Passenger compartment slewing equipment (645) - Telematics control unit (2152 ',)
F32	--	--	Not Used
F33	20A	BP3	Parking: via the passenger compartment control unit (645): Central locking Door rear right and left (138-139) -Clock lock driver and Passenger's door (1 40-141)
F34	--	--	Not Used
F35	10A	BCP4	Fuse: instrument panel (247)
F36	15A	BP75	Fuse: Main signal horn (105) via relay signal. (2Zg) Passenger and cargo compartments (260) - Diagnostic connection (225) - Alarm (1838) - \$ expensive Theft warning system (427)
F37	10A	BPA7	Release via UCH (central electronics) (645): CW lamp right And left (172-173r - Third brake light (639)

Fuses and Relays

Nr.	Amps	Connection	Designation
F38	--	--	Not Used
F39	--	--	Not Used
F40	40A	BPE3	Safety device for passenger compartment blower 1 (1 1 p.6) via power module Climatic equipment blower (123)
F41	40A	BP1	: Securing via Relays Passenger compartment blower 2 (14291: Control unit : Battery pack (22 1 6) - Battery motor (â3 1 8)
F42	40A	BP15	Fuse via relay rear window heating (2S51 1m fuse- And relay cabin Passenger compartment (260): Rear window heating (200) - .Sicherung F7 Power supply in fuse relay box Vehicle compartments (260)

## Fuses and Relays

---

Nr.	Amps	Designation
A	70A	Relay time-controlled, non-load-bearing discharge + continuous current (1762)
B	70A	Relays: + Accessories (1760)
C	40A	Relay: rear screen (235)
D	20A	Relay : Signal Horn (229)

### Connector 1

Connection	Connection	Designation
1	BPS1	Continuous current protected over safety
2	BP11	Continuous current protected> Driving range 1

### Connector 2

Connection	Connection	Designation
1	BP13	Continuous current fused> Passenger compartment 3
2	BP12	Continuous current fused> Passenger compartment 2

